





Materials List		
Picture	Name	QTY
	Screw	
	Dowel	
	Hinge	
1	Door	
2	Bottom Panel	
3	Shelf	
4	Back Panel	
5	Side Panel	
6	Top Panel	
7	Fixed Strip	
Instrument of installation		
	Electric hand drill	
	Hammer	

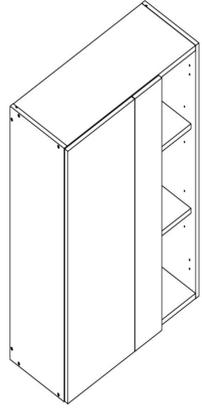

WBC3030/WBC3036/WBC3042


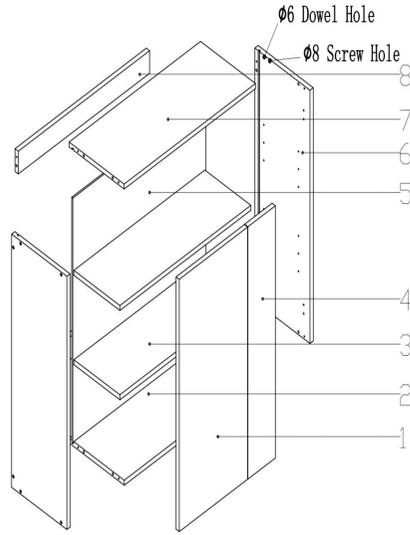


STEP 1 Install the dowel into the side panels. STEP 3 Insert the strip

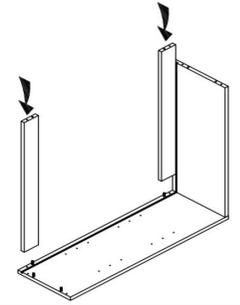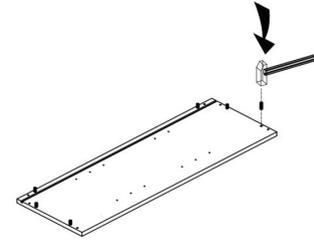


STEP 2 Keep a side panel flat on the floor, then insert Top panel.


STEP 4 Put another Bottom panel.

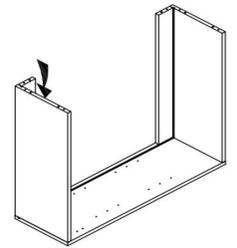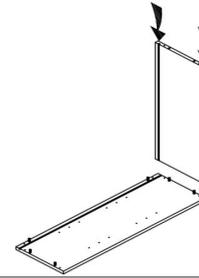


STEP 5 Insert the back panel.

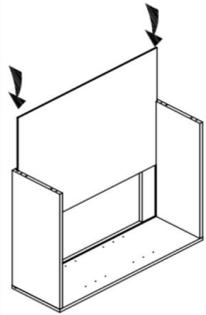


STEP 7 Upside down the cabinet, Turn the screw into the screw hole

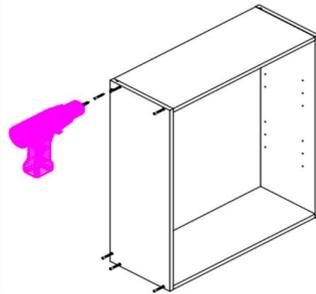


STEP 9 Install the hinge on the door.

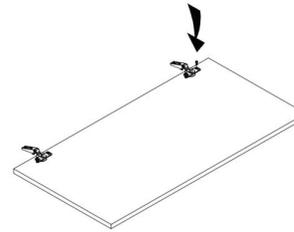


STEP 11 Install the shelf support and shelf.

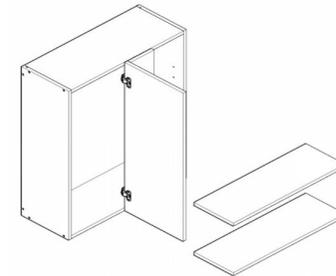


STEP 6 Put another side panel.

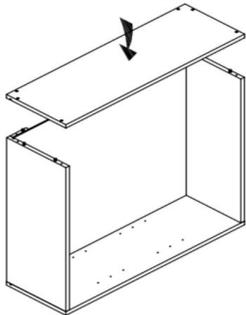


STEP 8 Install fixed sealing plates with corner codes.

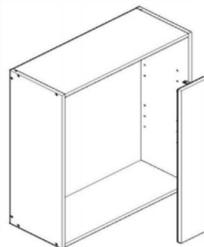

STEP 10 Press the hinges into the base, and then install doors.

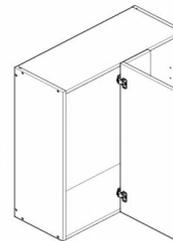

STEP 12 Accessible finished

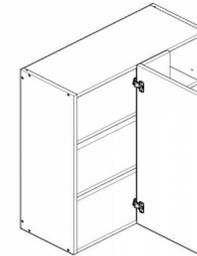


Materials List


Picture	Name	QTY
	Screws	
	Dowel	
	Hinge	
1	Door	
2	Bottom Panel	
3	Shelf	
4	Fixed Plate	
5	Back Panel	
6	Side Panel	
7	Top Panel	
8	Fixed Strip	

Instrument of installation




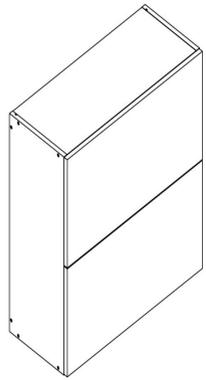


WBF3030/WBF3630  
WBF3036/WBF3636

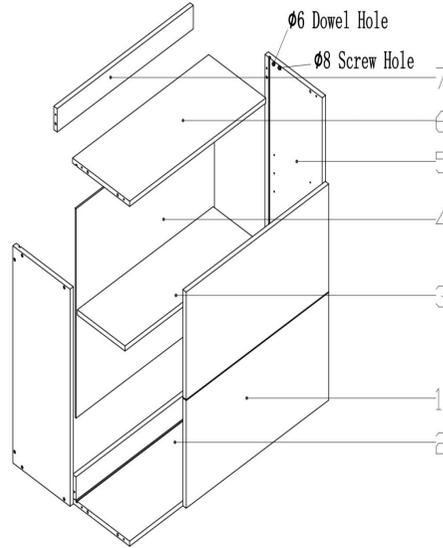


STEP 1 Install the dowel into the side panels.

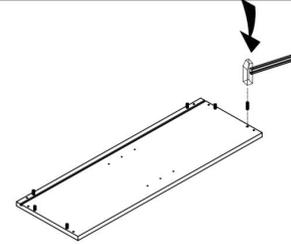


STEP 3 Insert the strip

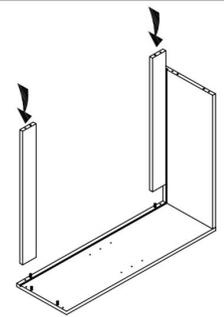


STEP 2 Keep a side panel flat on the floor, then insert Top panel.

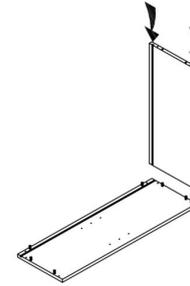


STEP 4 Put another Bottom panel.

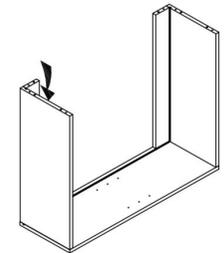


STEP 5 Insert the back panel.

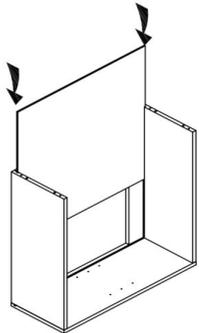


STEP 7 Upside down the cabinet, Turn the screw into the screw hole

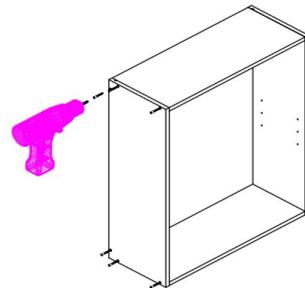


STEP 9 Install the hinge on the door.

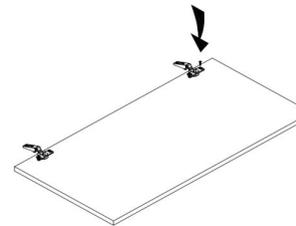


STEP 11 Install the shelf support and shelf.

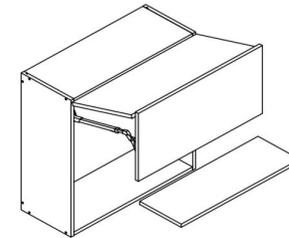


STEP 6 Put another side panel.

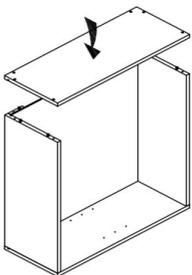


STEP 8 Install folding hardware fittings on side panels.

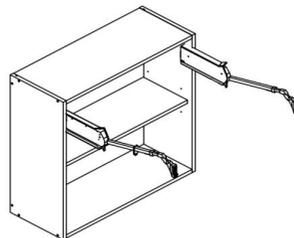

STEP 10 Press the hinges into the base, and then install doors.

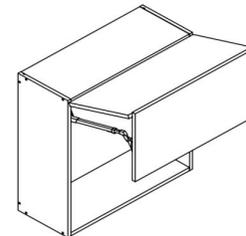


STEP 12 Accessible finished

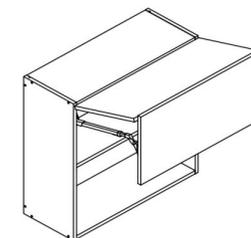

Materials List

Picture	Name	QTY
	Screws	
	Dowel	
	Hinge	
	Folding Hardware	
1	Door	
2	Bottom Panel	
3	Shelf	
4	Back Panel	
5	Side Panel	
6	Top Panel	
7	Fixed Strip	


Instrument of installation




Electric hand drill




Hammer

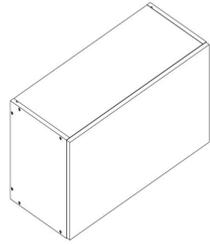


WSL3012 WSL3612  
 WSL3015 WSL3615  
 WSL3018 WSL3618

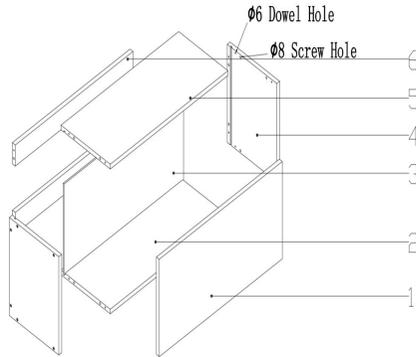


STEP 1 Install the dowel into the side panels.

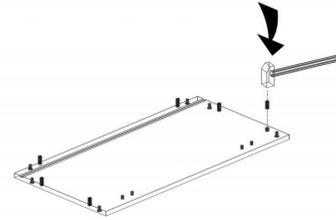


STEP 3 Insert the strip

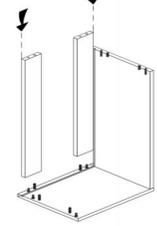


STEP 2 Keep a side panel flat on the floor, then insert Top panel.

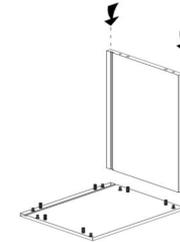


STEP 4 Put another Bottom panel.

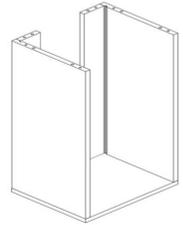


STEP 5 Insert the back panel.




STEP 7 Upside down the cabinet, Turn the screw into the screw hole

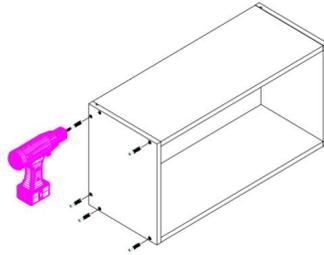

STEP 9 Install the hinge on the door.

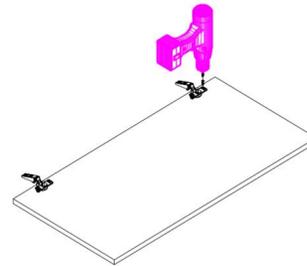


STEP 11 Accessible finished

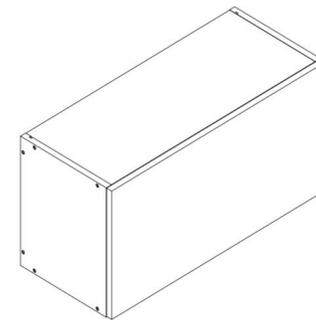


STEP 6 Put another side panel.



STEP 8 Install flip up fittings on side panels.

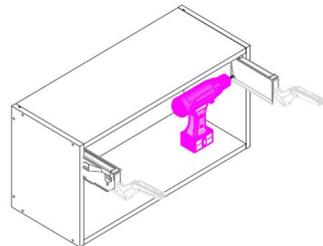

STEP 10 Press the hinges into the base, and then install doors.

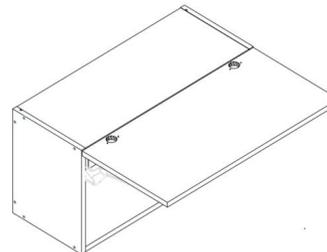


Materials List

Picture	Name	QTY
	Screws	
	Dowel	
	Hinge	
	Flip up Hardware	
1	Door	
2	Bottom Panel	
3	Shelf	
4	Back Panel	
5	Side Panel	
6	Top Panel	
7	Fixed Strip	













Instrument of installation




Electric hand drill




Hammer

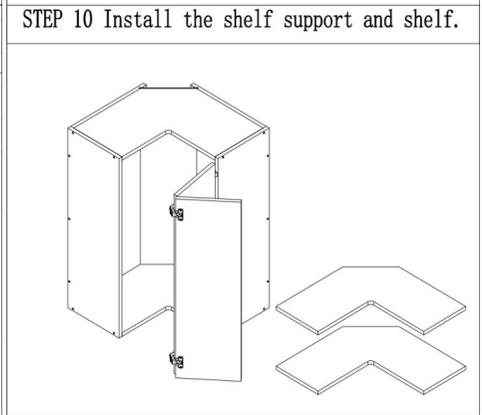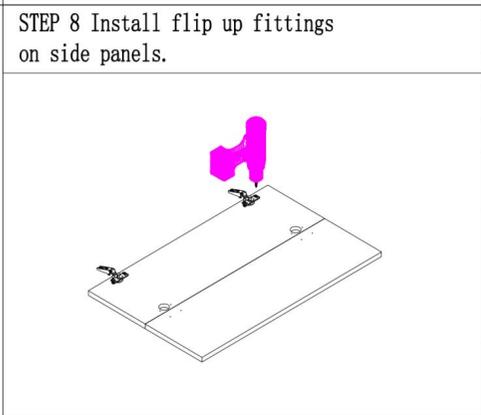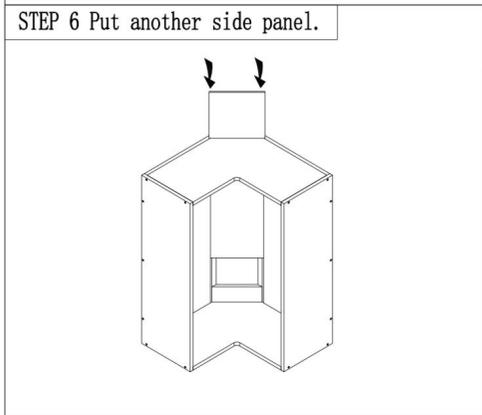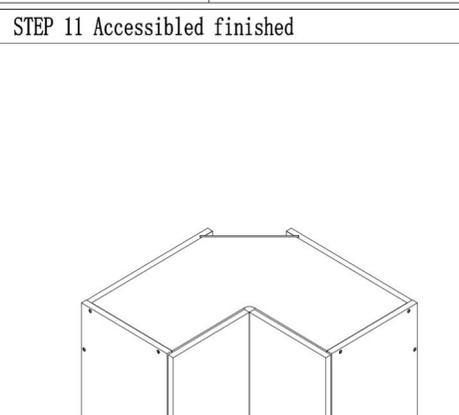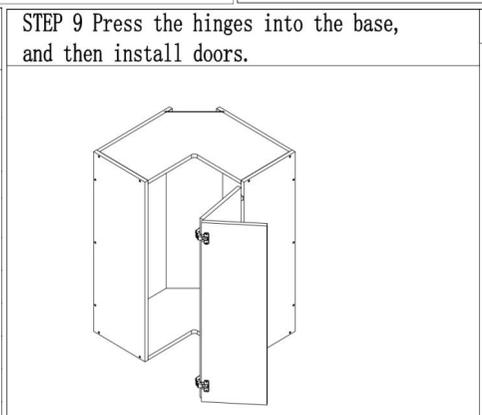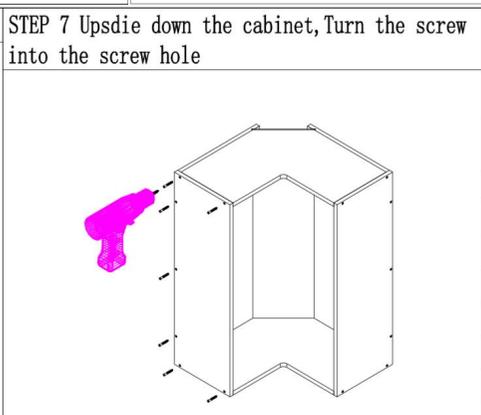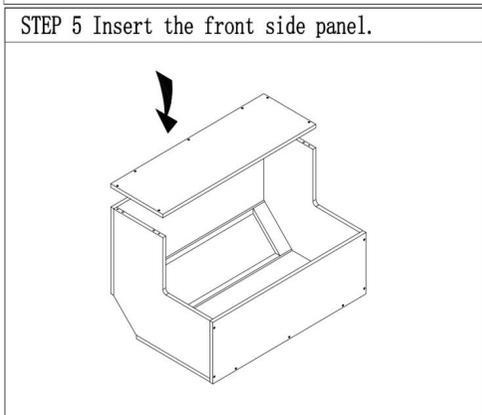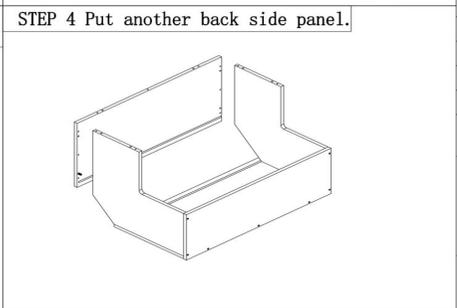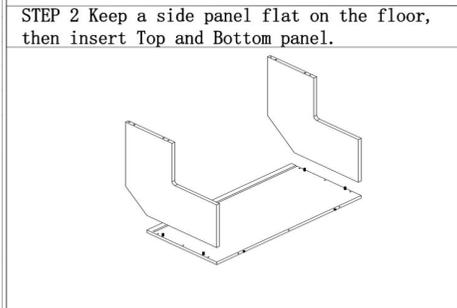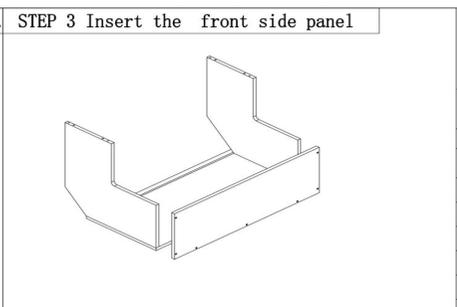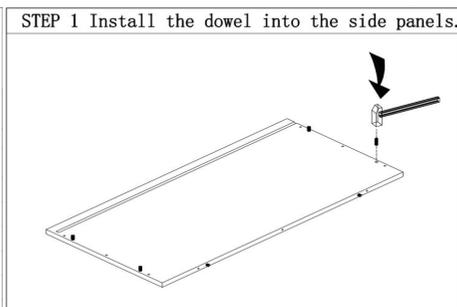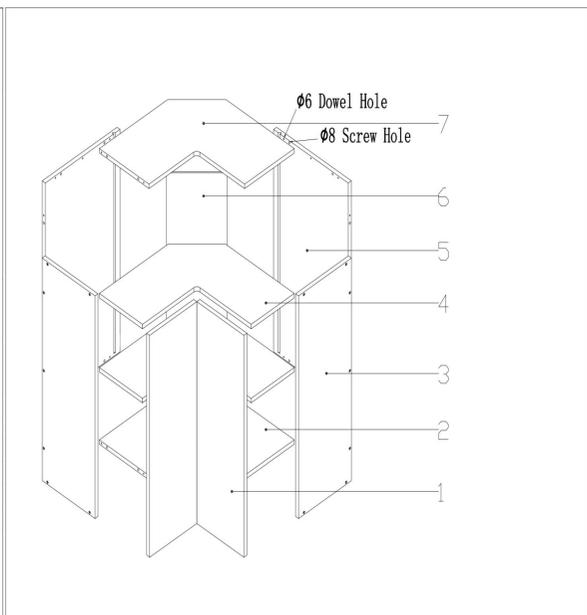

Materials List		
Picture	Name	QTY
	Screws	
	Dowel	
	Hinge	
	Door	1
	Bottom Panel	2
	Front Side Panel	3
	Shelf	4
	Back Side Panel	5
	Back Panel	6
	Top Panel	7
Instrument of installation		
	Electric hand drill	
	Hammer	

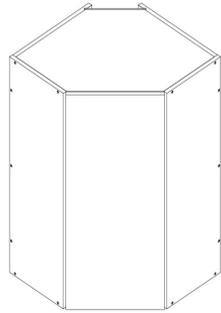


WDC2430-WDC2442

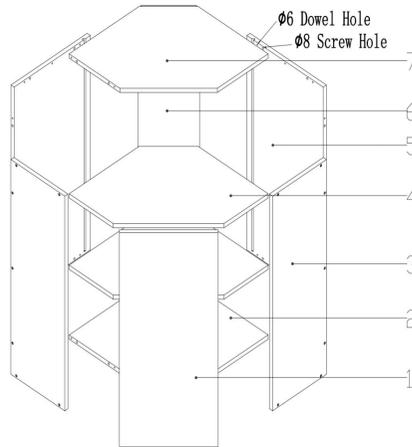


STEP 1 Install the dowel into the side panels.




STEP 3 Insert the front side panel

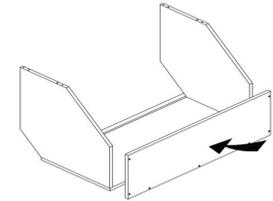


STEP 2 Keep a side panel flat on the floor, then insert Top and Bottom panel.

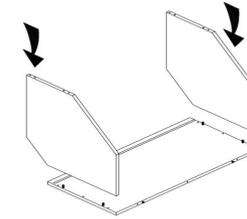


STEP 4 Put another back side panel.

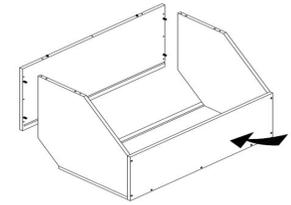


STEP 5 Insert the front side panel.

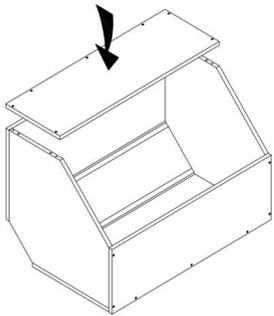


STEP 7 Upside down the cabinet, Turn the screw into the screw hole

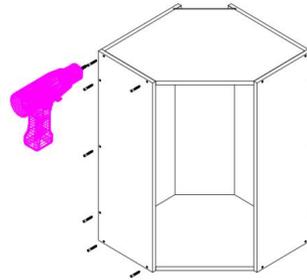


STEP 9 Press the hinges into the base, and then install doors.

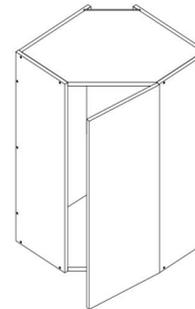


STEP 11 Accessible Finished.

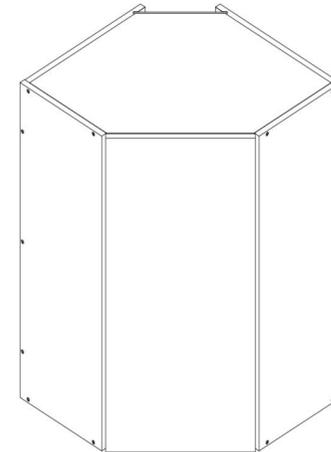


STEP 6 Put another side panel.

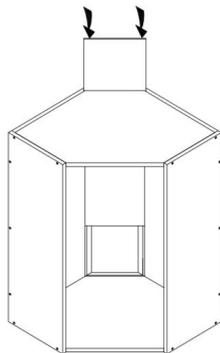

STEP 8 Install flip up fittings on side panels.

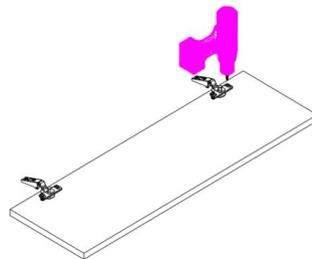

STEP 10 Install the shelf support and shelf.

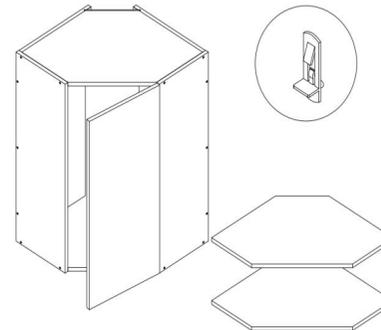

Materials List

Picture	Name	QTY
	Screws	
	Dowel	
	Hinge	
	1 Door	
	2 Bottom Panel	
	3 Front Side Panel	
	4 Shelf	
	5 Back Side Panel	
	6 Back Panel	
	7 Top Panel	

Instrument of installation



Electric hand drill



Hammer